

Cordless Drill

- Materials: plastic, wood, **light** metal
- Check the direction of rotation (clockwise)
- Make sure that the chuck is tight
- Return the chuck key to the top of the drill **straight away**